



plumfest

PT7276

Flow Rate Test Cup

0-17 Lpm



Instructions for use:

1. Ensure bottom of flow cup is closed & the baffle is in the bottom of the cup with legs facing downwards.
2. Turn the tap fully on & fill the flow cup to the top.
3. Leave the tap running & slowly twist top of the flow cup to the right. Adjust until water level in the cup is at a constant level (near the top of of the cup).
4. Turn tap off and record the measurement indicated by the arrow and the corresponding value.

Features:

- Scale measures flow rates of 0 to 17 litres per minute.
- Measure water flow rates to determine if suitable flow is available prior to plumbing installation.
- Also known as a weir cup.
- Easy to use.