



PT9866

Test Bucket



Instructions for use:

1. Connect the hose to the installed water pipework and close value V2.
2. Fill the pipework with water, bleed air, and tightly close all openings.
3. Using the pump on the bucket, increase pressure to the desired limit.
4. Close valve V1.
5. After test is complete release the pressure by opening valves V1 and V2.
6. Service moving parts using water-resistant grease.

Features:

- Quality 2 valve system.
- The SSTP50 Test Pump features a 60bar (900psi) pressure gauge.
- The 12L bucket has a 1.5m hose attached.
- This unit has a maximum pressure of 6000kPa.

